

BlackBerry Smartphones

Icon Guide

6.0

Status icons

Depending on your BlackBerry® device model and wireless service provider, some of these icons might not appear.

Home screen

These icons are status indicators that appear at the top of the Home screen.



New item

To clear this icon, open each item that has this indicator.



Update is available in the BlackBerry App World™ storefront



Sending data



New item in the Social Feeds application



Receiving data



System is busy



New BlackBerry® Messenger item



New BlackBerry Messenger group item

To clear this icon, open each chat that has this icon.



Roaming



Unopened message count



Alarm is set



Missed call count



GPS is turned on



Calendar reminder count



Bluetooth® technology is turned on



Wi-Fi® is turned on

Message inbox

These icons indicate the type or status of each message in your inbox.








 









Unopened message




New BlackBerry Messenger item

To clear this indicator, open each chat that has this indicator.

- | | | | |
|---|---------------------------------|---|-------------------------------------|
|  | Opened message |  | BlackBerry Messenger chat is open |
|  | Draft message |  | New BlackBerry Messenger group item |
|  | Filed message |  | New RSS item |
|  | Message with an attachment |  | Message is being sent |
|  | Message is high priority |  | Message has not been sent |
|  | Text message with an attachment |  | Message has been sent |
|  | Text message |  | Message has been delivered |
|  | Message has been read | | |






Battery power level

These icons appear at the top of the Home screen and at the top of the screen in some applications.

- | | | | |
|---|--------------|---|---------------------|
|  | Full battery |  | Battery is charging |
|  | Low battery | | |

Typing

These icons appear in the upper-right corner of the screen when you type.

- | | | | |
|---|--------------------------------|---|------------------------|
|  | CAP lock (capital letter lock) |  | Multi-tap mode |
|  | NUM lock (number lock) |  | Current input language |
|  | Alt mode | | |

Phone

These icons appear at the top of the Home screen and in the Phone application.

- | | | | |
|---|-------------|---|--------------------|
|  | Missed call |  | Received call |
|  | Placed call |  | Voice mail message |








 
Calendar

These icons appear at the bottom of the screen when you highlight a calendar entry.

- | | | | |
|---|------------------|---|-------------------------------------|
|  | Event reminder |  | Recurring appointment |
|  | Meeting reminder |  | Exception for recurring appointment |
|  | Notes | | |

Camera

These icons appear at the bottom of the screen in the camera. You can click these icons.

- | | | | |
|---|--------------------------|---|-------------------------|
|  | View pictures |  | Geotagging is turned on |
|  | Geotagging is turned off |  | Take another picture |
|  | Flash is turned on |  | Flash is turned off |
|  | Automatic flash mode |  | Scene mode |

Video camera

These icons appear at the bottom of the screen in the video camera. You can click these icons.

- | | | | |
|---|-----------------|---|-----------------|
|  | Start recording |  | Pause recording |
|  | Send video |  | Rename video |
|  | Delete video | | |